



CK 412  
OTOMATİK ÇİTA KESME MAKİNESİ  
PARÇA LİSTESİ - PART LIST - ПЕРЕЧЕНЬ ДЕТАЛЕЙ



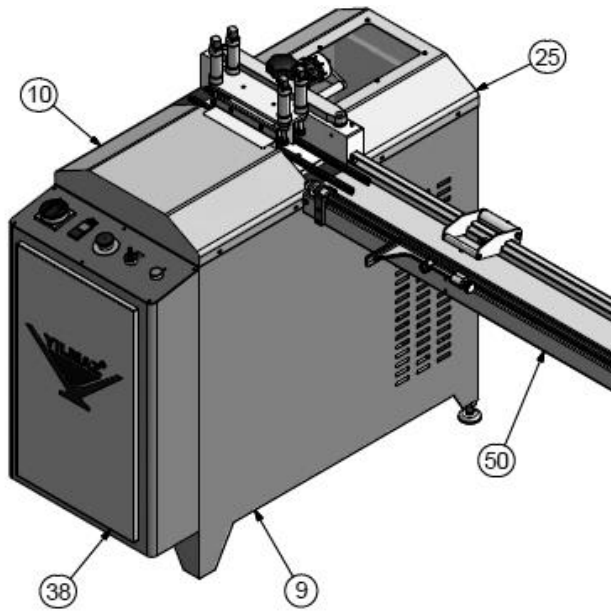

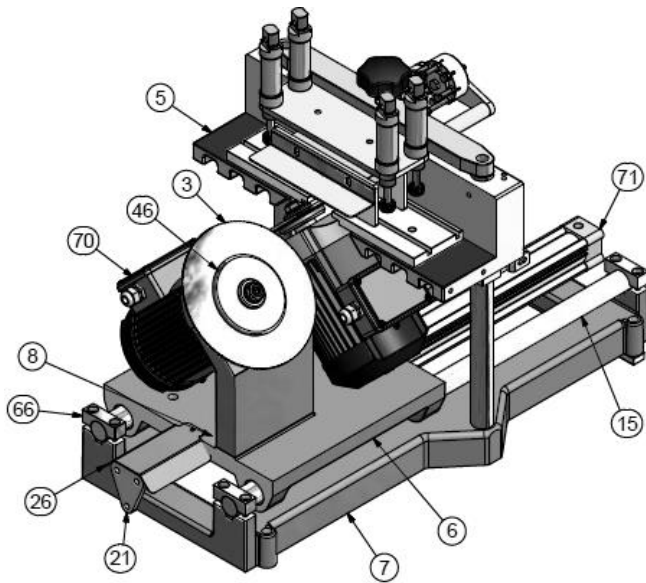

RESİM-PICTURE-РИСУНОК 2




RESİM- PICTURE -РИСУНОК 3





NO номер	STOK KODU STOCK CODE ПОРЯДОК КОД	ADET QTY КОЛИЧЕСТВО	NO номер	STOK KODU STOCK CODE ПОРЯДОК КОД	ADET QTY КОЛИЧЕСТВО
3	1SK010000-0001	1	76	2TU012210-1016	1
5	2TU012510-0392	1	76/1	1PN020000-0191	1
6	2TU012510-0308	1	76/2	2TU011110-1135	1
8	2TU012510-0311	2	76/3	2TU011441-0720	1
9	1SA010000-0051	1	76/4	2TU014010-0198	1
10	1SA030000-0091	1	76/5	2TU011441-0709	2
15	2TU014010-0093	2	76/6	2TU011441-0719	1
21	2TU011441-0289	1	81	2TU012310-0103	1
25	1SA030000-0090	1	87	2TU012210-1047	1
26	1SA050000-0152	1			
31	2TU012210-0906	1			
38	1SA020000-0026	1			
46	1SK010000-0008	1			
49	1PL020000-0008	1			
50	3UA010030-0097	1			
66	2TU011210-0643:	4			
70	3UA730030-0008	2			
71	1PN020000-0122	1			

YEDEK PARÇA LİSTESİ / SPARE PART LIST / СПИСОК ЗАПАСНЫХ ЧАСТЕЙ			
PARÇA NO PART NO НОМЕР	RESİM PICTURE РИСУНОК	STOK KODU / CODE ПОРЯДОК КОД	PARÇA ADI – PART NAME НАИМЕНОВАНИЕ ДЕТАЛИ
1		1EL090000-0003	XB7-NA31 START BUTONU START BUTTON КНОПКА START
2		1EL090000-0001	XB4-BS8442 ACİL STOP BUTONU EMERGENCY STOP BUTTON КНОПКА АВАРИЙНОЙ ОСТАНОВКИ
3		1EL050000-0027	RÖLE(SCHRACK) RT 424024 24V DC 2 C/O 8-10A
4		1EL040000-0405	KONTAKTÖR ASL09-30-10-81 (24V DC 50-60) CONTACTOR КОНТАКТОР

5		1EL090000-0016	XB4-BW73731B5 ÇİFTLİ BUTON (24V AC/DC LED) DOUBLE BUTTON КНОПКА ДУЭТ
6		1EL090000-0033	ÇİFTLİ BUTON KILIFI ZBA 710 DOUBLE BUTTON COVER ДУЭТ КРЫШКИ КНОПОК
7		1EL200000-0037	SENSÖR RZT6-03ZUS-KWO NO (1025522) (SICK) SENSOR ДАТЧИК